

Putting up your roller blind

Fitting inside the recess. Two brackets, drop the blind in, fit the tensioner.
Twenty minutes.

ABOUT

10-20 minutes

YOU'LL WANT


One is usually fine

PREFER TO WATCH?

homeblinds.au/install

First, tip everything out


Bracket set, covers and tensioner. Check the chain is on the side you ordered.

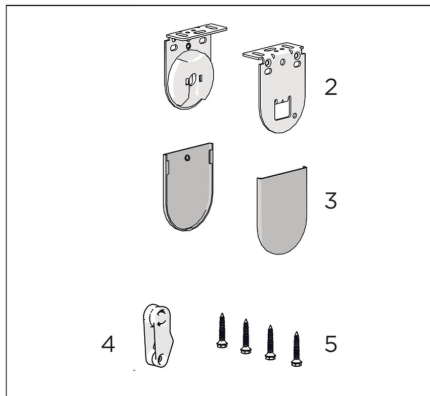

This is the manufacturer's full system drawing. Any screws or fasteners shown are not supplied with your blind.

What you'll need

Nothing exotic — it's all probably in the shed already.

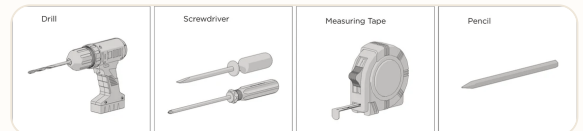

Fixings aren't included — on purpose

Every window goes into something different, so we don't supply screws or plugs. Choose fixings rated for **your** surface and the weight of the blind.

Timber or a stud — timber screws straight in.

Plasterboard — hit a stud, or use a rated hollow-wall anchor.

Brick, concrete or tile — masonry bit with matching plugs.

Not sure what you're fixing into? Send us a photo — we'll tell you.

Have you got the right guide?

Recess fit — brackets on the **side walls inside** the recess. That's this one.

Face fit — brackets on the **wall in front**. Different guide.

Please don't skip the safety clip


A loose cord or chain is a strangulation risk to small children. The tensioner **must** be screwed to the wall so the loop is held taut — that's an Australian requirement wherever the chain sits **under 1.6m from the floor**. Keep cots and anything climbable away from the blind, and **leave the warning label on the headrail**.

Right — let's put it up

Take your time on the first one and the rest falls into place.


1 Work out which way the brackets go

Inside mount — the brackets screw to the **side walls of the recess**. Use two fixings per bracket, through different holes.

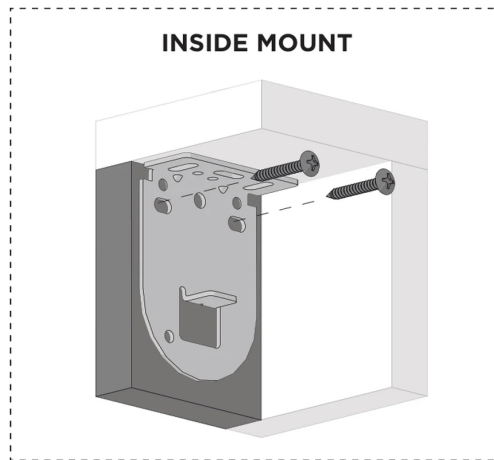

2 Fasten the brackets, level

Mark, drill and fix both brackets. Check across them with a level before you go further — a roller shows a slope the moment you drop the fabric.

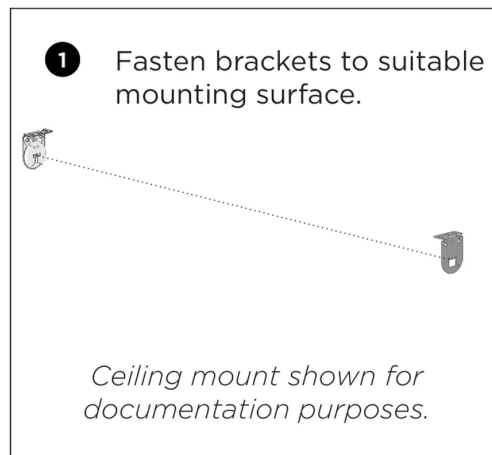


Nearly there

Two steps to go, then you can put the kettle on.


3 Control end in first, idler second

Always the control end first — line the hardware up with the bracket tongue and seat it. Then swing the idler end in.

2 Install control end first.

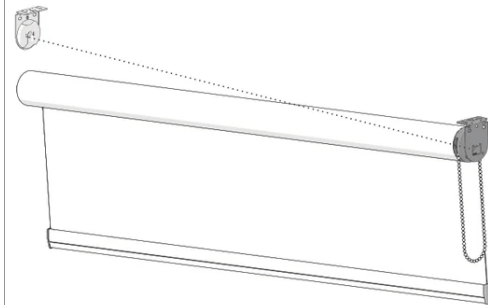



Ensure control hardware is aligned with bracket tongue.

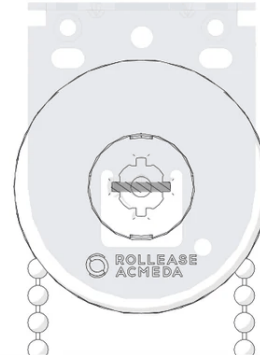

4 Extend the idler pin until it's solid


Rotate the idler wheel clockwise to push the pin out until the blind is properly captured. It should not lift out. Then fit the chain tensioner.

4 Ensure Idler has been extended to create a secure fit.

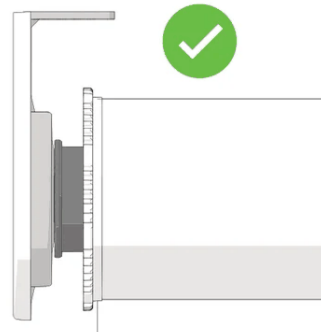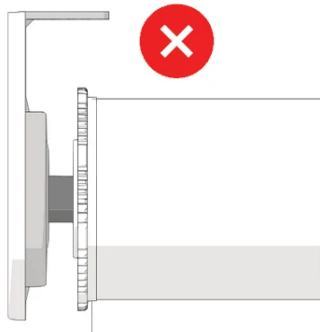

5 The chain tensioner is the safety step

Acmeda are explicit: a chain tensioner **must** be used if the chain sits less than **1.6m above the floor**. Screw it to the wall so there is no slack.

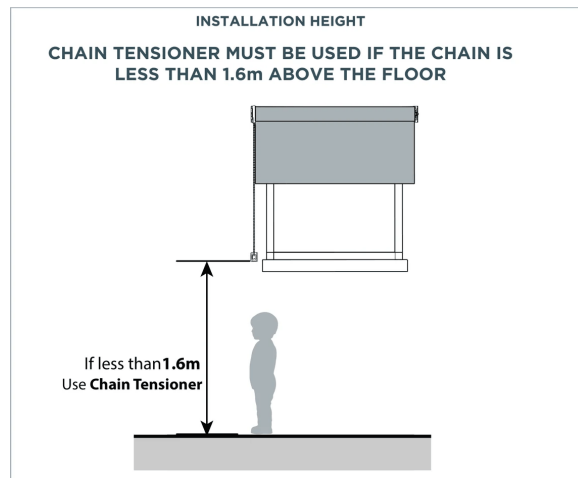

The safety clip is not optional

Screw it to the wall so the chain is held taut. Required wherever the chain hangs under **1.6m from the floor**.

Something not sitting right?

If the blind won't sit, the idler pin probably needs extending. If it rolls to one side, call us — there's an easy fix. **0477 011 346**.