

Putting up your roman blind

Four steps. The clips do the hard work — get them level and the rest is straightforward.

ABOUT

25-35 minutes

YOU'LL WANT


A second person for wide blinds

PREFER TO WATCH?

homeblinds.au/install

First, tip everything out


Check your clips off before you start. Wider blinds get more of them.

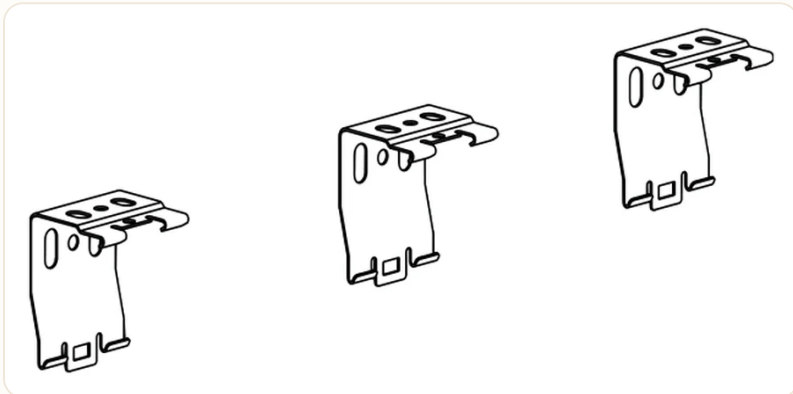

This is the manufacturer's full system drawing. Any screws or fasteners shown are not supplied with your blind.

What you'll need

Nothing exotic — it's all probably in the shed already.

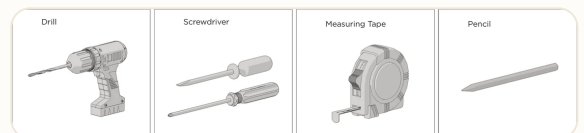

Fixings aren't included — on purpose

Every window goes into something different, so we don't supply screws or plugs. Choose fixings rated for **your** surface and the weight of the blind.

Timber or a stud — timber screws straight in.

Plasterboard — hit a stud, or use a rated hollow-wall anchor.

Brick, concrete or tile — masonry bit with matching plugs.

Not sure what you're fixing into? Send us a photo — we'll tell you.

Have you got the right guide?

Face fit — clips go on the **wall or architrave in front**. That's this one.

Recess fit — clips go **up inside** the recess. Different guide.

! Please don't skip the safety clip


A loose cord or chain is a strangulation risk to small children. The tensioner **must** be screwed to the wall so the loop is held taut — that's an Australian requirement wherever the chain sits **under 1.6m from the floor**. Keep cots and anything climbable away from the blind, and **leave the warning label on the headrail**.

Right — let's put it up

Take your time on the first one and the rest falls into place.


1 Fix the mounting clips

Hold a clip where the head rail will sit and mark through it. Keep the spacing even — Acmeda allow a **maximum of 990mm between clips** on the low-profile system.

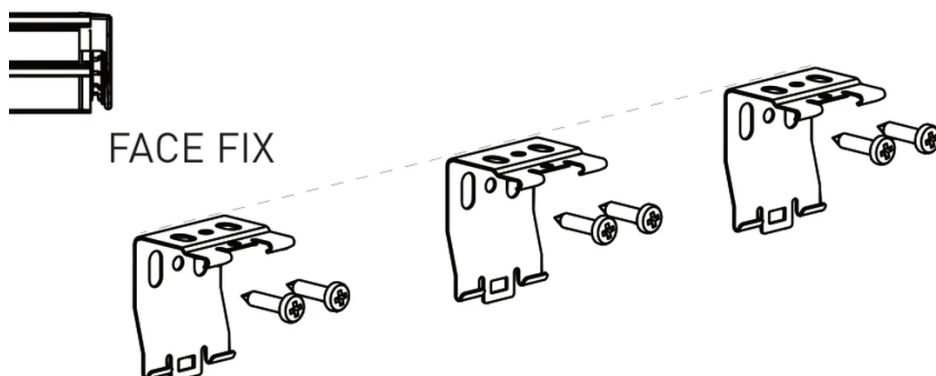

2 Sight along them

Every clip on one line. There's a little adjustment in the clip if you're a millimetre out, but get it close first.

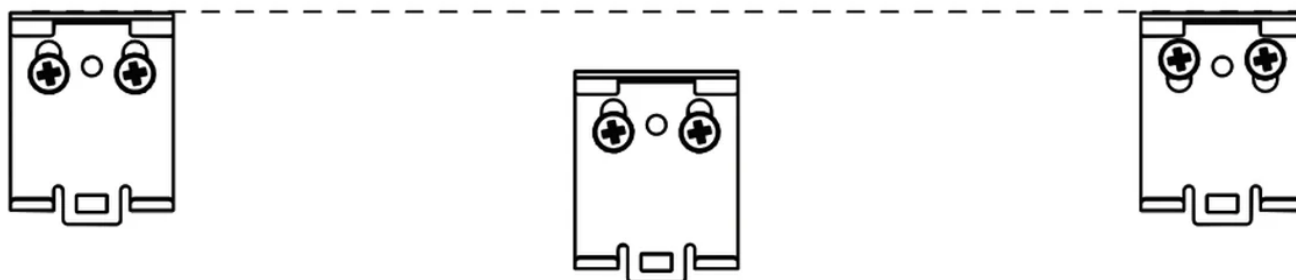


Nearly there

Two steps to go, then you can put the kettle on.

3 Lift the head rail onto the clips

Offer the head rail up and press it back until it clicks into every clip. Have a second pair of hands for anything wide — romans are heavier than they look.


the assembly onto the Mounting Clips.

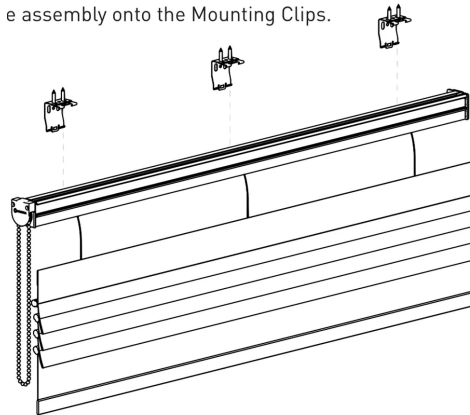

shown as example. Also applies to Face Fix.

4 Check it hangs true, then the safety clip

Lower and raise it fully. The folds should stack evenly. Screw the chain tension device to the wall so the chain is held taut — that's the safety step, not an optional extra.

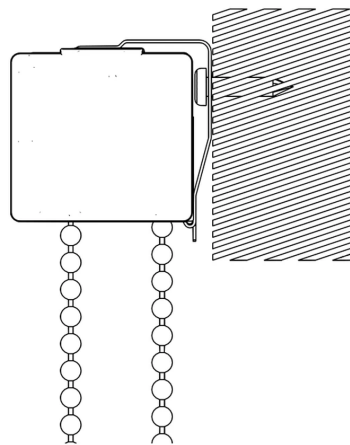

The safety clip is not optional

Screw it to the wall so the chain is held taut. Required wherever the chain hangs under **1.6m from the floor**.

Something not sitting right?

Uneven folds usually means the head rail isn't level. If it won't clip in, check the clips are all on one line. Ring us before you force it — **0477 011 346**.