

Putting up your vertical blind

Fitting inside the recess, with 89mm vanes. Same four steps as the face fit — the clips just go up instead of out.

ABOUT

20-30 minutes

YOU'LL WANT


A spare pair of hands

PREFER TO WATCH?

homeblinds.au/install

First, tip everything out

Lay it out and check it off. Your vanes are the 89mm width — worth a quick measure before you start.

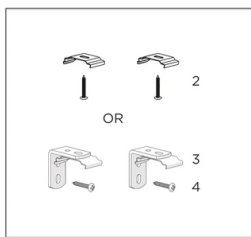

SYSTEM INDEX:

1. **HEADRAIL ASSEMBLY** x 1
2. **SPRING CEILING CLIP**
• *As required*
3. **INSTALLATION BRACKET**
• *As required*
4. **SCREWS**

This is the manufacturer's full system drawing. Any screws or fasteners shown are not supplied with your blind.

What you'll need


Nothing exotic — it's all probably in the shed already.

TOOLS REQUIRED


1 Drill



2 Screwdriver - Phillips Head & Flat Head



3 Measuring Tape



4 Pencil



Fixings aren't included — on purpose

Every window goes into something different, so we don't supply screws or plugs. Choose fixings rated for **your** surface and the weight of the blind.

Timber or a stud — timber screws straight in.

Plasterboard — hit a stud, or use a rated hollow-wall anchor.

Brick, concrete or tile — masonry bit with matching plugs.

Not sure what you're fixing into? Send us a photo — we'll tell you.

Have you got the right guide?

Recess fit — ceiling clips go **up inside** the recess. That's this one.

Face fit — brackets go on the **wall in front**. Different guide.

! Please don't skip the safety clip

A loose cord or chain is a strangulation risk to small children. The tensioner **must** be screwed to the wall so the loop is held taut — that's an Australian requirement wherever the chain sits **under 1.6m from the floor**. Keep cots and anything climbable away from the blind, and **leave the warning label on the headrail**.


Right — let's put it up

Take your time on the first one and the rest falls into place.

1 Mark and fix the ceiling clips

Start the end clips **40–60mm in from each end** of the headrail, then spread the rest evenly — **one every 1.5m** or closer. Mark through the holes, drill, and fix with the right anchor for your wall.


- 1 Secure the Ceiling Clip to the ceiling with appropriate screws.
Install one Bracket every 1.5m

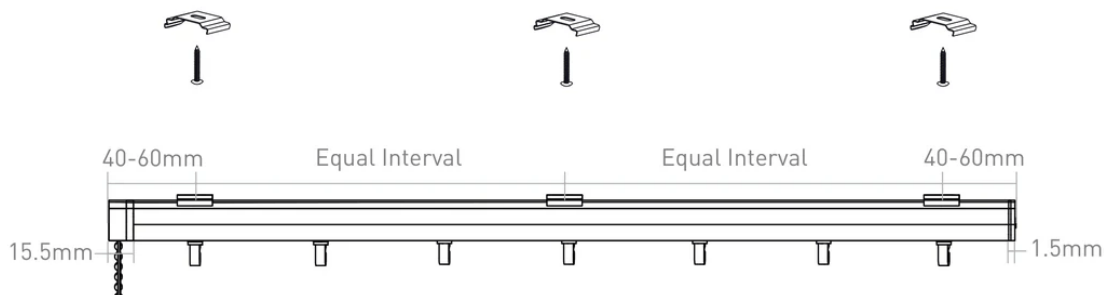

2 Sight along them before you go further

They all need to sit on one line. Thirty seconds here saves you taking the whole thing down later.

- 2 Ensure alignment is straight.

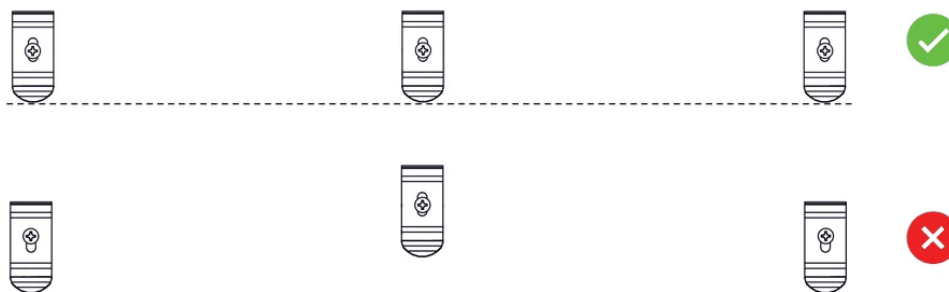


Nearly there

Two steps to go, then you can put the kettle on.

3 Clip the headrail on

Lift it up into the clips and push until each one clicks. Run your hand along and check every one has properly closed — a half-shut one lets go weeks later.


3 Attach the assembly to ceiling brackets.

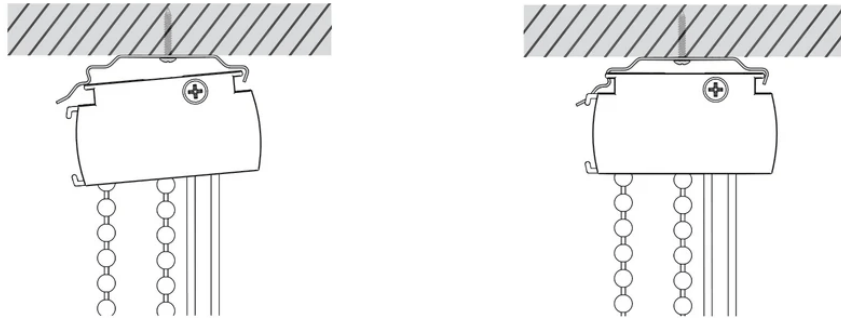

4 Hang the vanes and you're done

Turn all the carriers the same way first, then hook each slat on. Join the bottom chain so they hang evenly, screw the safety clip to the wall, and give it a full open and close.

1 Hook Slat onto hooks of Carriers

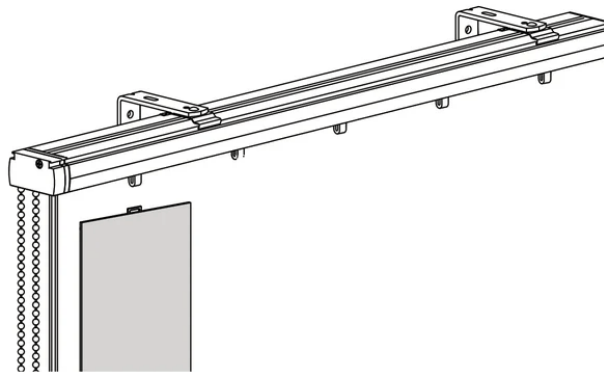

The safety clip is not optional

Screw it to the wall so the chain is held taut. Required wherever the chain hangs under **1.6m from the floor**.

Something not sitting right?

Vanes not closing flush is a carrier turned the wrong way. A rail that won't clip is a bracket out of line. Ring us before you force it — **0477 011 346**.